

2-Axis High Speed Interpolation/Normal Motion Controller

2-Axis high speed interpolation/normal motion controller

NEW

■ Features

- Independent 2-axis controlling with high operating speed of max. 4Mpps
- Linear/Circular interpolation control (PMC-2HSP)
- Realizing a wide variety of operation up to 200 steps using 17 different operation programs (13 commands except circular/linear interpolation command for PMC-2HSN series)
- Various control interface available (USB, RS232C, RS485, Parallel I/F)
- Controlling up to 32 axis (16 units) via RS485 serial communication (Modbus RTU)
- 4 operation modes : Jog, Continuous, Index, Program mode
- Symmetrical/asymmetrical trapezoid, S-shaped de/acceleration driving function



PMC-2HS□-USB

PMC-2HS□-485

⚠ Please read "Caution for your safety" in operation manual before using.



(Except for PMC-2HS□-485)

■ User manual

- Please refer to user manual for detailed instructions and specifications.
- Visit our web site (www.autonics.com) to download user manual and software [MotionStudio].
- User manual describes installing software, setting parameter and program, operation mode, and multi-axis operation, etc. to operate motion controller.

■ Software (MotionStudio)

- MotionStudio is the windows software designed to operate motion control for PMC-2HSP/2HSN series.
- Compatible Microsoft Windows 98, NT, 2000, XP (32bit, 64bit), Vista (32bit, 64bit) and 7 (32bit, 64bit)
 - Supports 9,600, 19,200, 38,400, 57,600, 115,200 bps transmission speeds
 - Available to use on all OS supported COM ports (COM1 to COM256)
 - Multilingual support (Korean, English)
 - Provides a calculator for convenience (Calculates PPS, center of interpolation, end coordinates)

■ Ordering information

PMC - 2HSP - USB

Item	Axis/Type	Communication type	485	RS485 / RS232C
			USB	USB / RS232C
			2HSP	2-Axis high speed interpolation
			2HSN	2-Axis high speed normal
			PMC	Programmable Motion Controller

■ Specifications

Model	PMC-2HSP-USB	PMC-2HSP-485	PMC-2HSN-USB	PMC-2HSN-485			
Control axis	2-Axis						
Motor for control	Pulse string input stepping motor or servo motor						
Power supply	24VDC						
Power consumption	Max. 6W						
Inposition range	-8,388,608 to 8,388,607 (Selectable Absolute/Relative value, Available pulse-scaling function)						
Range for the drive speed	1 pps to 4 Mpps (1 to 8,000pps × Magnification 1 to 500)						
RUN mode	Scan / Continuous / Index (Number of index : 64EA)						
	Power on program start function / Program step : 200 step						
	Program mode	ABS	Move absolute position	RID	2-axis CCW arc interpolation(★)	IRD	Stand-by external input
		INC	Move relative position	TIM	Timer	OPT	ON/OFF output port
		HOM	Home search	JMP	Jump	ON	pulse from output port
		LID	2-axis CCW linear interpolation(★)	REP	Start repetition	NOP	No Operation
		CID	2-axis CW circular interpolation(★)	RPE	End repetition	END	End program
		FID	2-axis CW arc interpolation(★)	ICJ	Jump input condition		
Home search mode							
4 Step : High speed near home search, low speed home search, low speed Z-phase search, High speed offset movement Power on home search function							
I / O	<ul style="list-style-type: none"> • Parallel I/F (CN3) : Input 13EA, Output 4EA • X-axis (CN 4) / Y-axis (CN 5) : Input 8EA, Output 6EA (General-purpose I/O, 2EA each) 						
Ambient temperature	0 to 45°C (at non-freezing status)						
Storage temperature	-15 to 70°C (at non-freezing status)						
Ambient humidity	20 to 90%RH						
Accessory	<ul style="list-style-type: none"> • [Common] Pwer connector, I/O connector (P I/F, X-axis, Y-axis), RS232C communication cable (1.5m) 1EA, Manual • [USB type] USB communication cable 1m 1EA • [RS485 type] RS485 connector 1EA 						
Unit weight	Approx. 102g	Approx. 101g	Approx. 102g	Approx. 101g			

※(★)These commands are only for PMC-2HSP series.

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching power supply
- (Q) Stepping motor & Driver & Controller
- (R) Graphic/Logic panel
- (S) Field network device
- (T) Production stoppage models & replacement

PMC-2HSP/PMC-2HSN Series

Basic operation

There are two way to operate motion controller.

- Using PC (MotionStudio)

Operates by connecting PC and the motion controller with communication cable and running MotionStudio.

- Using Parallel I/F


Operates by connecting sequence controller or switch to Parallel I/F.

Commands in the operation program

Command type	Code	Description
Drive commands	ABS	Move absolute position
	INC	Move relative position
	HOM	Home search
	LID	2-axis CCW linear interpolation (★)
	CID	2-axis CW circular interpolation (★)
	FID	2-axis CW arc interpolation (★)
	RID	2-axis CCW arc interpolation (★)
I/O commands	ICJ	Jump input condition
	IRD	Stand-by external input
	OPC	ON/OFF output port
	OPT	ON pulse from output port
Program control commands	JMP	Jump
	REP	Start repetition
	RPE	End repetition
	END	End program
Others	TIM	Timer
	NOP	No operation

※(★)These commands are only for PMC-2HSP series.

Part descriptions


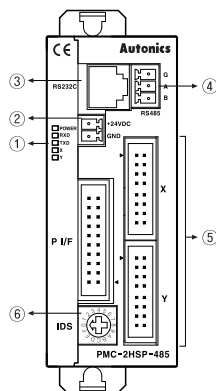


- ① Power / Status indicator
Used to indicate power, controller's communication status and operation status for each axis
- ② Power connector terminal
Used to connect power for controller
- ③ RS232C connector terminal
Used to connect RS232 serial(RJ12-DSUB9) connection cable
- ④ USB/RS485 connector terminal
Used to connect USB and RS485 connection cable
- ⑤ External I/O connector terminal
Used to operate various drives through input and output of Parallel I/F, X, Y
- ⑥ ID select switch
Used to set unique ID for each node in case of RS485 communication

Explanation of Input/Output terminal

- PMC-2HS□-USB

- PMC-2HS□-485

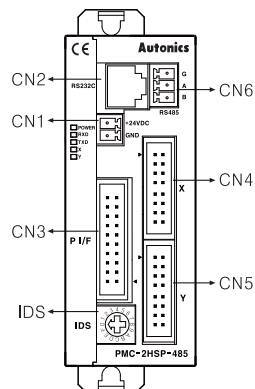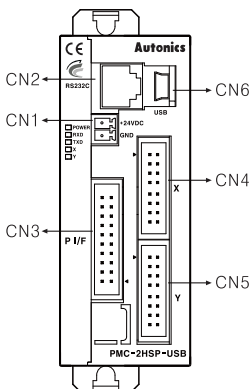


Connector No.	Description
CN1	Power connector
CN2	RS232C connector
CN3	Parallel I/F connector
CN4	X-Axis I/O connector
CN5	Y-Axis I/O connector
CN6	PMC-2HSP/2HSN-USB : USB connector
	PMC-2HSP/2HSN-485 : RS485 connector
IDS	ID selection switch

2-Axis High Speed Interpolation/Normal Motion Controller

■ Power connector(CN1)

Pin No.	Signal name
1	24VDC
2	GND(0V)


<CN3 Pin No> <CN4 Pin No> <CN5 Pin No>

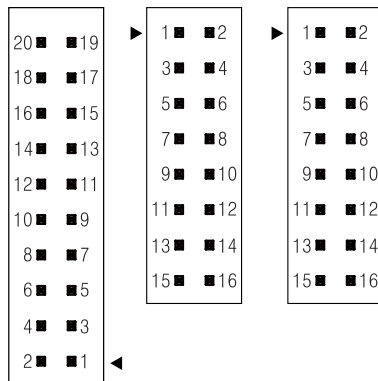

■ RS232C connector(CN2)

Pin No.	Signal name	Input/Output	Description
1	TXD	Output	Receiving data
2	RXD	Input	Transmitting data
3	GND	—	Ground
4	—	—	No-connection
5	—	—	No-connection
6	—	—	No-connection

(Note) The internal connection diagram of RS232C communication cable is shown as below.

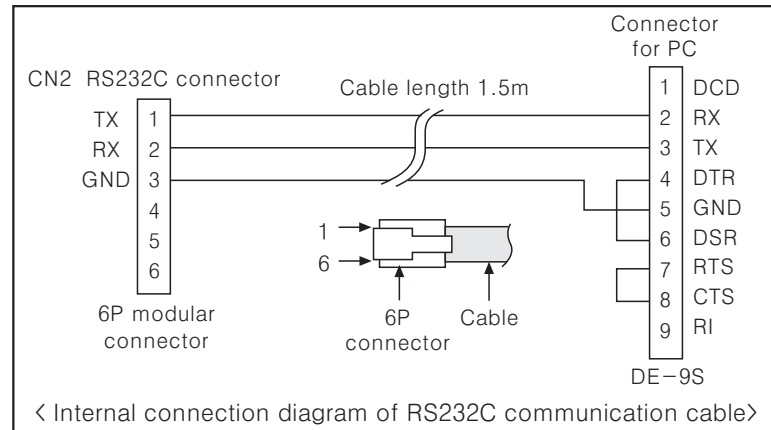

■ Parallel I/F connector(CN3)

The Parallel I/F connector which is connected with a sequencer or mechanical contacts operates motion controller same as PC program. When input signal is ON, the input signal terminal and GEX terminal are connected by mechanical contacts or open collector output etc. and open collector output transistor is ON when the output signal is ON.

Pin No.	Signal name	Input/Output	Description
1	RESET	Input	Reset
2	HOME	Input	Home search start command
3	STORE	Input	Drive start command
4	X/SCANY +	Input	X-axis specification/Scan Y+
5	Y/SCANY -	Input	Y-axis specification/Scan Y-
6	REGSL0/RUN+/SCANX+	Input	Register specification 0/Run+/Scan X+
7	REGSL1/RUN-/SCANX-	Input	Register specification 1/Run-/Scan X-
8	REGSL2/SPD0	Input	Register specification 2/Drive speed specification 0
9	REGSL3/SPD1	Input	Register specification 3/Drive speed specification 1
10	REGSL4/SPD2	Input	Register specification 4/Scan specification
11	REGSL5/STOP	Input	Register specification 5/Drive stop
12	MODE0	Input	Operation mode specification 0
13	MODE1	Input	Operation mode specification 1
14	XDRIVE/END	Output	X-axis drive/Drive end pulse
15	YDRIVE/END	Output	Y-axis drive/Drive end pulse
16	XERROR	Output	X-axis error
17	YERROR	Output	Y-axis error
18	GEX	0V	Ground
19	GEX	0V	Ground
20	VEX	+24V	Power supply for sensor(24VDC, Max. 100mA)

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/Socket

(H) Temp. controller

(I) SSR/Power controller

(J) Counter

(K) Timer

(L) Panel meter

(M) Tacho/Speed/Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching power supply

(Q) Stepping motor & Driver & Controller


(R) Graphic/Logic panel

(S) Field network device


(T) Production stoppage models & replacement

PMC-2HSP/PMC-2HSN Series

Input/Output connections(CN3)

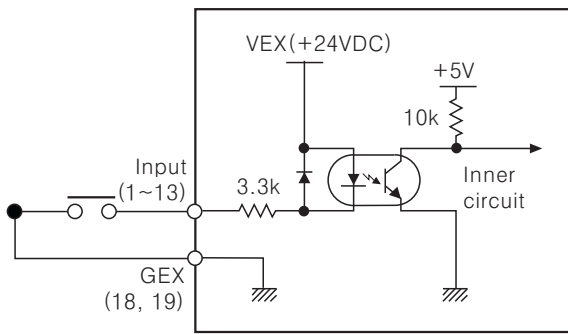

< CN3 control input connections >

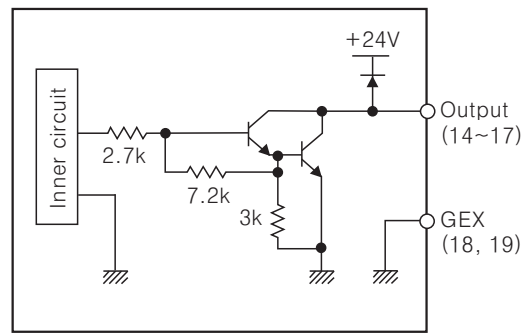

< CN3 control output connections >

X, Y-Axis Input/Output connector(CN4, CN5)


CN4 and CN5 are I/O signals for X-Axis and Y-Axis respectively.

The pin arrangement of CN4 and CN5 are equal. 'n' in the table means X for CN4 and Y for CN5.


Pin No.	Signal name	Input/Output	Description
1	n P+P	Output	Drive pulse in the + direction
2	n P+N	Output	Drive pulse in the + direction
3	n P-P	Output	Drive pulse in the - direction
4	n P-N	Output	Drive pulse in the - direction
5	n OUT0	Output	General output0
6	n OUT1	Input	General output1
7	n IN0	Input	General input0
8	n IN1	Input	General input1
9	n STOP2	Input	Encoder Z-phase
10	n STOP1	Input	Home
11	n STOP0	Input	Near Home
12	n LMT+	Input	LMT+
13	n LMT-	Input	LMT-
14	EMG	Input	Emergency stop
15	GEX	0V	Ground
16	VEX	+24V	Power supply for sensor(24VDC, Max. 100mA)

※CN4, 5 input/output is same as CN3 input/output connections.

Drive pulse output of motion controller which is inputted to motor driver is line driver output.

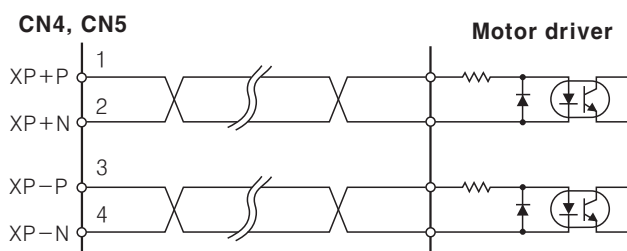

< Motor driver connection exemple >

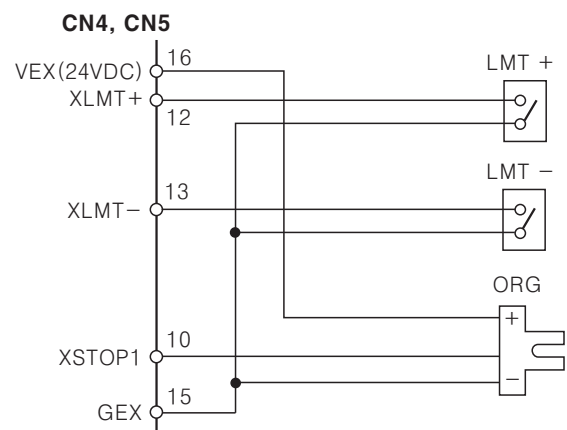

< LMT and HOME sensor connection exemple >


2-Axis High Speed Interpolation/Normal Motion Controller

RS485 connector(CN6)

Pin No.1	Signal name	Input/Output	Description
2	B(-)	I/O	Transmitting / Receiving data
3	A(+)	I/O	Transmitting / Receiving data
	G	—	(Note1)


※(Note1) : Connect the ground when it is required depending on communication environments.

Connections

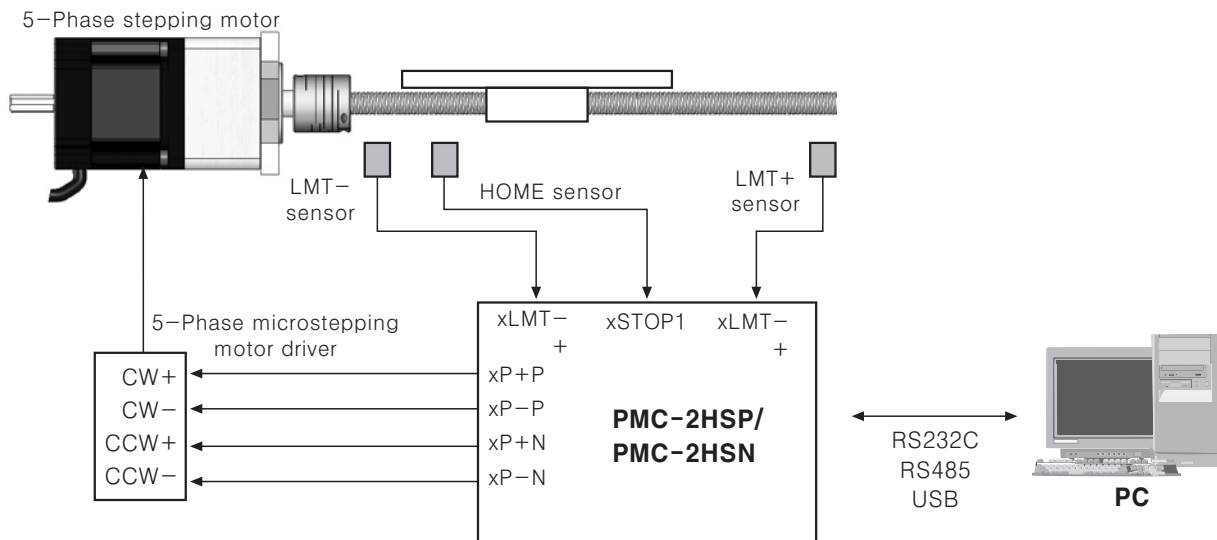

< Basic configuration of the motion controller(Configuration only for X-axis) >

Dimensions

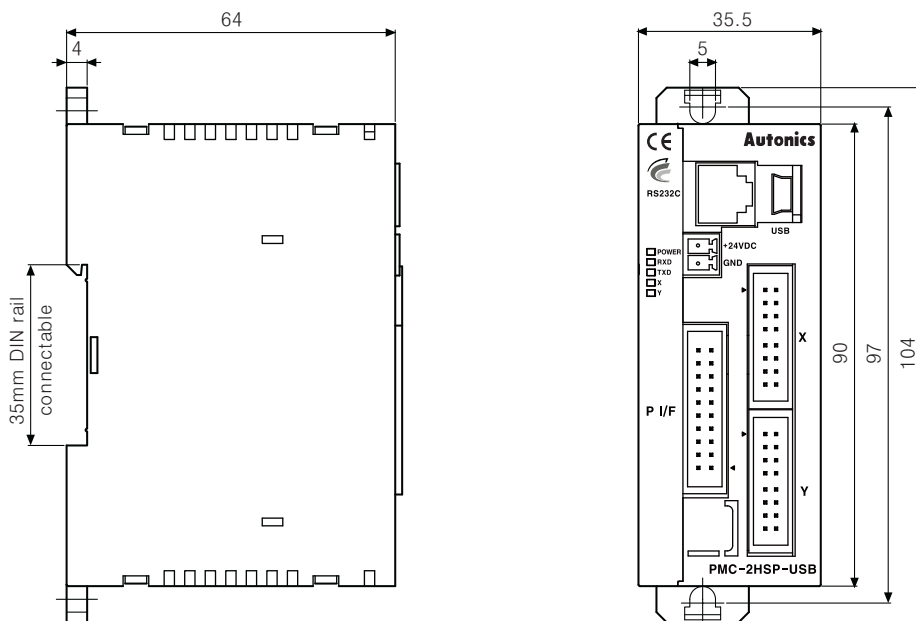

(Unit:mm)

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching power supply
- (Q) Stepping motor & Driver & Controller**
- (R) Graphic/Logic panel
- (S) Field network device
- (T) Production stoppage models & replacement